


Cleaning your Air Flow Sensor

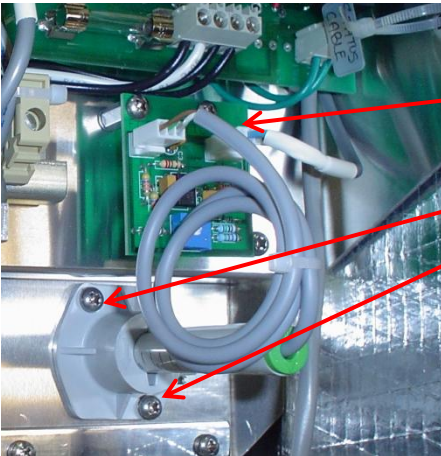


Disconnect all power to the unit.
Disconnect the Air Flow Sensor Jack
and remove the 2 screws from the
Air Flow Sensor bracket.

Gently remove the sensor with its
protective screen from the unit.



Remove the protective screen and
clean it.

IF NECESSARY; lightly blow debris
from the sensor port

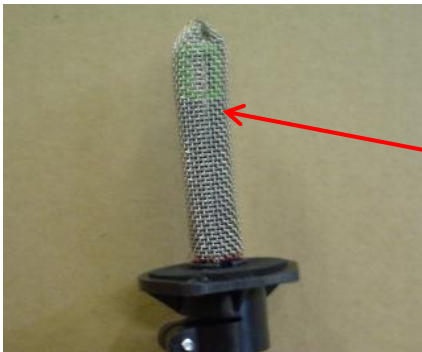

Carefully place the clean screen back
over the sensor; ensure the weld on the
screen is placed on the side of the
sensor. Do not place the weld over the
front or back of the sensor as this will
restrict air flow.



Gently place the sensor back into the unit. **The arrow on the sensor bracket MUST be facing down when re-installing.** Insert the screws back into the sensor bracket, reconnect the Air Flow Sensor. Re-connect power to the unit and confirm the Airflow Sensor is functioning.